

- 1) Center the LOGO panel on the wall under the basket so that it centers the lane area.*

* If your panel or any panel has custom cut-outs, arranging them in their place takes the priority over the center of the lane.

- 2) On the 1" nailer; drill holes through the mat into the wall, using the masonry bit provided.
Fig.1 →

- 3) Insert masonry screws into the holes and secure the mat to the wall

- 4) Repeat these steps for the rest of the mats, making sure you keep them level.

Fig.1


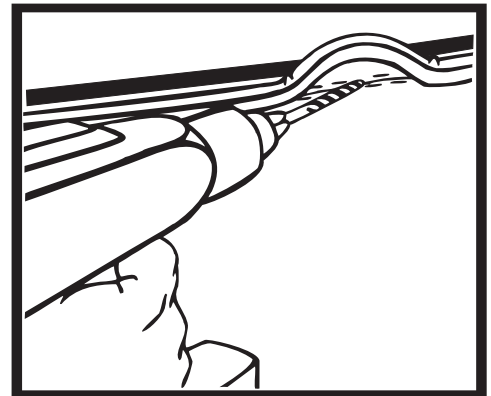


Fig.2



HINT: Use blocks to hold the panel up and keep a consistent height.
Use a bubble level on every panel to check for square.

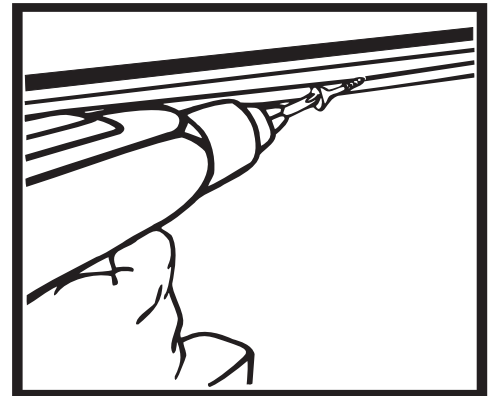